

NORD Pallet Rack-MiR

The Pallet Rack for MiR can hold pallets with a total weight of up to 1250 kg (2756 lbs) and comes in both a version for EU-size pallets, and a version for US-size pallets.

The NORD Pallet lifts mounted on a MiR can dock in the pallet rack to receive or deliver a pallet.

The Pallet Rack is easy to mount and setup – simply measure the correct distance between the two parts and bolt the rack to the floor. It has a unique centering mechanism that makes sure the pallets gets centered every time.



NORD compatibility



NORD PL-EU-MiR & NORD PL-US-MiR

MiR compatibility



MiR600 & MiR1350

Designated use	Hold or receive a pallet with a max payload of 1 250 kg
Robot compatibility	MiR500, MiR600, MiR1000, MiR1350
NORD compatibility	NORD PL-EU-MiR & NORD PL-US-MiR
Color	RAL9005 Jet Black
Max payload capacity	1 250 kg 2 756 lbs

Disclaimer

Specifications may vary based on local conditions and application



Small footprint
around AMR



Unique centering
mechanism



Simple and fast
to mount




EU-size or
US-size



Max payload of up to
1 250 kg

Specifications

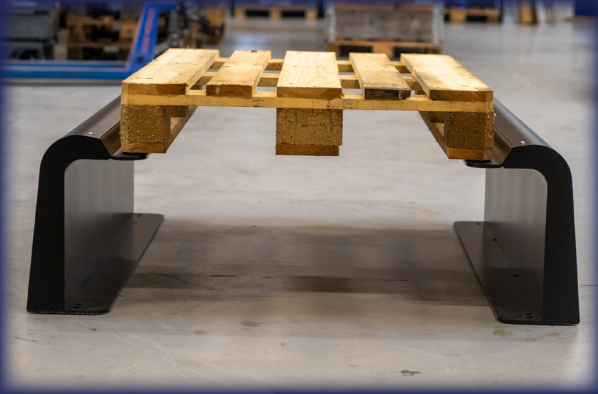

Dimensions

Length EU-size	1 300 mm 51.2 in
Length US-size	1 300 mm 51.2 in
Width EU-size	1 178 mm 46.4 in
Width US-size	1 394 mm 54.9 in
Height EU-size	389 mm 15.3 in
Height US-size	481 mm 18.9 in
Height, floor to pallet EU-size	348 mm 13.7 in
Height, floor to pallet US-size	440 mm 17.3 in

Pallets

EU-size pallet dimensions	EU EPAL 800 mm x 1 200 mm 31.5 x 47.24 in
US-size pallet dimensions	1 016 mm x 1 219 mm 40 x 48 in