


# Nord Lift EU V1 - OTTO 1500

Optimize your internal logistics by automating the internal transportation of pallets with the Nord Modules EU Lift Top Module. Nord Modules EU Lift autonomously picks up and delivers pallets in the P&D Stand Cantilever.

Stable handling and transport of EU size pallets. It enables the OTTO AMRs to lift pallets autonomously from the Cantilever Stand and lowers the pallet for stable transportation of payloads up to 1500 kg.

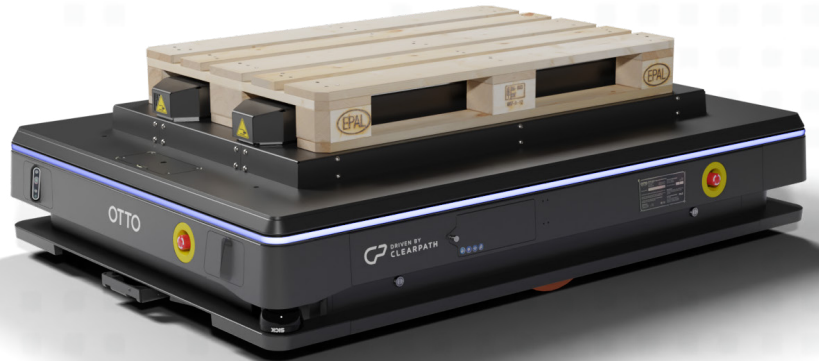

## Nord compatibility



Nord P&D Stand Cantilever 1200 V1 - OTTO 1500

## OTTO compatibility



OTTO 1500

Designated use	For autonomous pickup and unload of EU-sized pallets
Product name	Nord Lift EU V1 - OTTO 1500
Robot compatibility	OTTO 1500
Nord Modules compatibility	Nord P&D Stand Cantilever 1200 V1 - OTTO 1500
Weight	125 kg   275.6 lbs
Max. payload capacity	1 500 kg   3 307 lbs
Disclaimer	Specifications may vary based on local conditions and application



Can handle uneven weight distribution



Zero to low maintenance



600.000+ lifts



High industrial level of quality



Max. payload of 1500 kg

# Specifications

V1 Rev. A: 11.07.2024.



## Performance

Number of lift cycles with max payload	Minimum 600 000
Lifting speed	Up: 4 s - Down: 4s
Data collection	Error codes + data transfer to AMR
Stack light	Information of operating level and service status

## Pallets

EU-size pallet dimensions	1 200 x 800 mm   47.2 x 31.5 in
Pallet production dimensions	EN 13698-1

## Dimensions

Length	1 371 mm   53.97 in
Width	853 mm   33.58 in
Height	154 mm   6.06 in
Lifting height	60 mm   2.4 in